### **PC Vision System FJ Series**


# Camera & Software Vision Package

- Built-in high-quality image processing in a PC system
- Resolving a variety of applications with highly robust and advanced measurement algorithm
- Gigabit Ethernet camera that can be connected to the FJ application software (the connectivity tested and verified)
- Building a machine vision using a customized sample in no time





### **System Configuration**

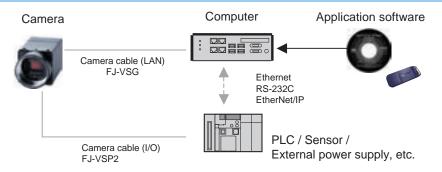

### **Ordering Information**

|  | Type       |                              |                     | Model         | Operating environment  |  |
|--|------------|------------------------------|---------------------|---------------|--|--|
|  | 1 ype      | 400,000 pixels               | Monochrome          | FJ-SG2-S      | CPU: Intel Pentium Processor (SSE2 or higher)  |  |
| Camera & Software  |            |                              |                     |               | OS: Windows 7 Professional (32/64bit) or   |  |
| Vision Package   |            | 400,000 pixels               | Color               | FJ-SCG2-S     | Enterprise (32/64bit) or Ultimate (32/64bit),<br>Windows 10 (32/64bit)   |  |
| <ul> <li>Application software<br/>× 1 license</li> </ul>                             |            | 2 million pixels             | Monochrome          | FJ-S2MG2-S    | NET Framework: .NET Framework 3.5 SP1 or higher  |  |
| (CD-ROM × 1,   |            | 2 million pixels             | Color               | FJ-SC2MG2-S   | Memory: At least 2 GB RAM     Available disk space: At least 2 GB  |  |
| Dongle key × 1)  ■ Camera × 1 unit   |            | 5 million pixels             | Monochrome          | FJ-S5MG2-S    | Camera interface: Ethernet 1000BASE-T  |  |
| • Camera × 1 unit  |            | 5 million pixels             | Color               | FJ-SC5MG2-S   | Display: XGA (1024 × 768), True Color (32-bit) or higher     Optical drive: CD/DVD drive   |  |
|  |            | 400,000 pixels               | Monochrome          | FJ-SG2        |  |  |
|  |            | 400,000 pixels               | Color               | FJ-SCG2       |  |  |
| Camera (Single unit)   |            | 2 million pixels             | Monochrome          | FJ-S2MG2      |  |  |
| Carriera (Sirigle uriit)   |            | 2 million pixels             | Color               | FJ-SC2MG2     |  |  |
|  |            | 5 million pixels             | Monochrome          | FJ-S5MG2      |  |  |
|  |            | 5 million pixels             | Color               | FJ-SC5MG2     |  |  |
| Tripod Mount<br>(Optional adapter for<br>fastening the camera with<br>tripod screws) |            | -                            |                     | TP-KWA        | _  |  |
| Camera cable (LAN)   | 0          | Cable length: 3 m<br>40 m    | ı, 5 m, 10 m, 20 m, | FJ-VSG □M *1  |  |  |
| Camera cable<br>(Power, I/O)   | 9          | Cable length: 3 m, 5 m, 10 m |                     | FJ-VSP2 □M *2 |  |  |
| Development environment  | Media only | CD-ROM                       |                     | FH-AP1        | CPU: Intel Pentium Processor (SSE2 or higher)     OS: Windows 7 Professional (32/64bit) or Enterprise (32/64bit) or Ultimate (32/64bit), Windows 8 Pro (32/64bit) or Enterprise (32/64bit), Windows 8.1 Pro (32/64bit) or Enterprise (32/64bit), Windows 10 Pro (32/64bit) or Enterprise (32/64bit), The following operating environment is required to use the camera FJ-S□□□G2.  Windows 7 Professional (32/64bit) or Enterprise (32/64bit) or Ultimate (32/64bit) Windows 10 (32/64bit)  NET Framework: .NET Framework 3.5 SP1 or higher  Memory: At least 2 GB RAM |  |
| Application Producer *3  | 1 license  | _                            |                     | FH-AP1L       | Available disk space: At least 2 GB     Browser: Microsoft® Internet Explorer 6.0 or later     Display: XGA (1024 × 768), True Color (32-bit) or higher     Optical drive: CD/DVD drive     The following operating environment is required to use the camera FJ-S□□□G2.     Camera interface: Ethernet 1000BASE-T     The following software is required to customize the software: Microsoft® Visual Studio® 2008 Professional, or Microsoft® Visual Studio® 2010 Professional, or Microsoft® Visual Studio® 2012 Professional                                       |  |

<sup>\$1</sup>. The boxes in the model numbers are replaced by the cable length: 3 m = 3, 5 m = 5, 10 m = 10, 20 m = 20 and 40 m = 40

<sup>\*2</sup>. The boxes in the model numbers are replaced by the cable length: 3 m = 3, 5 m = 5, 10 m = 10

**<sup>\*3.</sup>** Use the development environment Application Procedure version 6.31.

**Lenses**Refer to the Vision Accessory Catalog (Cat. No. Q198) for details.

|              |                    | Recommended lens |                  |   |  |
|--------------|--------------------|------------------|------------------|---|--|
| Camera Model | Resolution         | Standard Lens    | Telecentric Lens | Vibrations and Shocks<br>Resistant Lens |  |
| FJ-SG2       | 0.4 million pixels | SV-V Series      | VS-TCH Series    | VS-MCA Series                           |  |
| FJ-SCG2      | 0.4 million pixels |                  |                  |   |  |
| FJ-S2MG2     | 2 million pixels   | - SV-H Series    |                  |   |  |
| FJ-SC2MG2    | 2 million pixels   |                  |                  |   |  |
| FJ-S5MG2     | 5 million pixels   |                  |                  |   |  |
| FJ-SC5MG2    | 3 million pixels   |                  |                  |   |  |

### **Ratings and Performance**

### Camera

|                              |                                  | FJ-SCG2/SG2  | FJ-SC2MG2/S2MG2  | FJ-SC5MG2/S5MG2  |  |  |  |
|------------------------------|----------------------------------|--|--|--|--|--|--|
| Imaging element              |                                  | Progressive scan 1/2.9" CMOS   | Progressive scan 1/1.7"CMOS  | Progressive scan 2/3"CMOS  |  |  |  |
| Shutter                      |                                  | Global shutter   | Global shutter   |  |  |  |  |
| Effective pix                | els                              | 720 (H) × 540 (V)  | 1,624 (H) × 1,240 (V)  | 2,448 (H) × 2,048 (V)  |  |  |  |
| Pixel size                   |                                  | 6.9 (μm) × 6.9 (μm)  | 4.5 (μm) × 4.5 (μm)  | 3.45 (μm) × 3.45 (μm)  |  |  |  |
| Synchronou                   | s system                         | Internal synchronous   |  |  |  |  |  |
| Frame rate                   |                                  | 282.8 fps  | 54.6 fps   | 21.9 fps   |  |  |  |
| Number of u                  | ptake lines                      | 4 to 540 line  | 8 to 1240 line   | 4 to 2048 line   |  |  |  |
| Gain                         |                                  | 0 dB to +20.8 dB   |  |  |  |  |  |
| Shutter spee                 | d                                | 1 μs to 16.777 s   |  |  |  |  |  |
| Video output                 | t                                | Digital 8 bit  |  |  |  |  |  |
| Trigger inpu                 | t                                | External trigger/Software trigger (Ethern  | et)  |  |  |  |  |
| External out                 | put                              | Strobe trigger/Trigger READY (can be c   | onfigured by software)   |  |  |  |  |
| I/F                          |                                  | Gigabit Ethernet (1 Gbit/s)  |  |  |  |  |  |
| Lens mount                   |                                  | C mount  |  |  |  |  |  |
| Power                        | Camera cable (LAN)               | Power over Ethernet (Conform to IEEE8  | 302.3af)   |  |  |  |  |
| delivery                     | Camera cable (power supply, I/O) | 10.8 to 13.2 VDC   |  |  |  |  |  |
| Dawer sansı                  |                                  | PoE supply: 4.7 W  | PoE supply: 4.9 W  | PoE supply: 4.4 W  |  |  |  |
| Power consu                  | шрион                            | Power and I/O connector supply: 3.7 W  | Power and I/O connector supply: 4.0 W                                | Power and I/O connector supply: 3.6 W                                |  |  |  |
| Vibration res                | sistance                         | 10 to 150 Hz, Half amplitude 0.35 mm (Acceleration: Max. 50 m/s²), 3 directions (X/Y/Z) 8 minutes each, 10 times |  |  |  |  |  |
| Impact resis                 | tance                            | 150 m/s², 6 directions (Up and Down, Right and Left, Back and Forth) 3 times each                                |  |  |  |  |  |
| Ambient temperature          |                                  | Operating:<br>0 to 39°C, or 64°C or less at the top of<br>the casing   | Operating:<br>0 to 36°C, or 64°C or less at the top of<br>the casing | Operating:<br>0 to 40°C, or 64°C or less at the top of<br>the casing |  |  |  |
|                              |                                  | Storage: -20 to 70°C (with no icing or condensation)   |  |  |  |  |  |
| Ambient humidity             |                                  | Operating and storage: 35% to 85% (with no condensation)   |  |  |  |  |  |
| Ambient env                  | ironment                         | No corrosive gas   |  |  |  |  |  |
| Protective st                | ructure                          | IEC60529 standard IP30   |  |  |  |  |  |
| Weight                       |                                  | Approx. 65 g   |  |  |  |  |  |
| Materials                    |                                  | Aluminum alloy   |  |  |  |  |  |
| Minimum cable bending radius |                                  | FJ-VSG: 27.2 mm  |  |  |  |  |  |

### Dongle key

| Interface                      | USB 2.0  |
|--------------------------------|--|
| Operating current              | 50 mA maximum                                  |
| Operating temperature/humidity | 0 to 50°C / 35 to 85% (No condensation)        |
| Storage temperature/humidity   | -25 to 70°C / 35 to 85% (No condensation)      |
| Weight                         | Approx. 6 g                                    |
| Dimensions                     | Approx. 44.0 mm (L) × 16.0 mm (W) × 8.0 mm (H) |

### **Processing Items**

| Group        | Icon  | Processing Item                |  |  |
|--------------|-------|--------------------------------|--|--|
|              | 1     | Search                         | Used to identify the shapes and calculate the position of measurement objects.   |  |
|              | *     | Flexible Search                | Recognizing the shapes of workpieces with variation and detecting their positions.   |  |
|              | 7.    | Sensitive Search               | Search a small difference by dividing the search model in detail, and calculating the correlation  |  |
|              | 4     | ECM Search                     | Used to search the similar part of model form input image. Detect the evaluation value and position.   |  |
|              | 4     | EC Circle Search               | Extract circles using "round " shape informatio and get position, radius and quantity in high preciseness.   |  |
|              | A     | Shape Search II                | Used to search the similar part of model from input image regardless of environmental changes. Detect the evaluation value and position.   |  |
|              | A     | Shape Search III               | Robust detection of positions is possible at<br>high-speed and with high precision<br>incorporating environmental fluctuations, such<br>as differences in individual shapes of the<br>workpieces, pose fluctuations, noise<br>superimposition and shielding. |  |
|              | 4     | EC Corner                      | This processing item measures a corner position (corner) of a workpiece.   |  |
|              | 4     | Ec Cross                       | The center position of a crosshair shape is measured using the lines created by the edge information on each side of the crosshair.  |  |
|              | 9     | Classification                 | Used when various kinds of products on the assembly line need to be sorted and identified  |  |
|              | ŧ     | Edge Position                  | Measure position of measurement objects according to the color change in measuremen area.  |  |
|              |       | Edge Pitch                     | Detect edges by color change in measuremer area. Used for calculating number of pins of I and connectors.  |  |
|              | 1     | Scan Edge Position             | Measure peak/bottom edge position of workpieces according to the color change in separated measurement area.   |  |
|              | =     | Scan Edge Width                | Measure max/min/average width of workpiece according to the color change in separated measurement area.  |  |
|              | O     | Circular Scan Edge<br>Position | Measure center axis, diameter and radius of circular workpieces.   |  |
| Measurement  | 0     | Circular Scan Edge<br>Width    | Measure center axis, width and thickness of rin<br>workpieces.   |  |
| vicasurement | 4     | Intersection                   | Calculate approximate lines from the edge<br>information on two sides of a square workpied<br>to measure the angle formed at the intersectio<br>of the two lines.  |  |
|              | 2     | Color Data                     | Used for detecting presence and mixed varietie of products by using color average and deviation.   |  |
|              |       | Gravity and Area               | Used to measure area, center of gravity of workpices by extracting the color to be measured.   |  |
|              | 1     | Labeling                       | Used to measure number, area and gravity of workpieces by extracting registered color.   |  |
|              | 1     | Label Data                     | Selecting one region of extracted Labeling, an get that measurement. Area and Gravity position can be got and judged.  |  |
|              | W     | Defect                         | Used for appearance measurement of plain-<br>color measurement objects such as defects,<br>stains and burrs.   |  |
|              | A     | Precise Defect                 | Check the defect on the object. Parameters for extraction defect can be set precisely.   |  |
|              | 8     | Fine Matching                  | Difference can be detected by overlapping an comparing (matching) registered fine images with input images.  |  |
|              | AB    | Character Inspect              | Recognize character according correlation search with model image registered in [Model Dictionary].  |  |
|              | 840 S | Date Verification              | Reading character string is verified with international date.  |  |
|              | A     | Model Dictionary               | Register character pattern as dictionary. The pattern is used in [Character Inspection].   |  |
|              | BIA   | 2DCode II *1                   | Recognize 2D code and display where the cod quality is poor.   |  |
|              | BIA   | 2DCode *2                      | Recognize 2D code and display where the cod quality is poor.   |  |
|              | #11   | Barcode *3                     | Recognize barcode, verify and output decode characters.  |  |
|              | 0 ( ) | OCR                            | Recognize and read characters in images as character information.  |  |
|              | 000   | OCR User<br>Dictionary         | Register dictionary data to use for OCR.   |  |
|              | •     | Circle Angle                   | Used for calculating angle of inclination of circular measurement objects.   |  |
|              | 6     | Glue Bead<br>Inspection        | You can inspect coating of a specified color for gaps or runoffs along the coating path.   |  |
|              | 嚛     | Camera image input GigE        | Capture images from a GigE camera.   |  |
| lament la    | 1     | Camera Image<br>Input HDR      | Create high-dynamic range images by acquirin several images with different conditions.   |  |
| nput Image   | 199   | Camera Switch                  | To switch the cameras used for measurement Not input images from cameras again.  |  |
|              | 10    | Measurement<br>Image Switching | To switch the images used for measurement. Not input images from camera again.   |  |

| Group               | Icon   |                               | Processing Item  |
|---------------------|--|-------------------------------|--|
|                     | 79   | Multi-trigger<br>Imaging      | The Multi-trigger Imaging processing item captures multiple images at user-defined timings and executes parallel measurement for each image. Insert the Multi-trigger Imaging to the top of the flow.  |
| Input Image         | 4.0  | Multi-trigger<br>Imaging Task | The Multi-trigger Imaging processing item captures multiple images at user-defined timings and executes parallel measurement for each image. Insert this processing item to the top of the processing which requires imaging for multiple times. |
|                     | <u>×</u>   | Position<br>Compensation      | Used when positions are differed. Correct measurement is performed by correcting position of input images.   |
|                     | 25   | Filtering                     | Used for processing images input from cameras in order to make them easier to be measured.   |
|                     | 12   | Background<br>Suppression     | To enhance contrast of images by extracting color in specified brightness.   |
|                     | 1  | Brightness Correct<br>Filter  | Track brightness change of entire screen and remove gradual brightness change such as uneven brightness.   |
|                     | 1  | Color Gray Filter             | Color image is converted into monochrome images to emphasize specific color.   |
|                     |  | Extract Color Filter          | Convert color image to color extracted image or binary image.  |
|                     | -  | Anti Color Shading            | To remove the irregular color/pattern by uniformizing max.2 specified colors.  |
| Compensate          | 1  | Stripes Removal Filter II     | Remove the background pattern of vertical, horizontal and diagonal stripes.  |
| image               | ST.  | Polar<br>Transformation       | Rectify the image by polar transformation.<br>Useful for OCR or pattern inspection printed on<br>circle.   |
|                     |  | Trapezoidal<br>Correction     | Rectify the trapezoidal deformed image.  |
|                     | 30   | Machine Simulator             | How the alignment marks would move on the image when each stage or robot axis is controlled can be checked.  |
|                     | 2  | Image Subtraction             | The registered model image and measurement image are compared and only the different pixels are extracted and converted to an image.   |
|                     | Tr.  | Advanced filter               | Process the images acquired from cameras in<br>order to make them easier to measure. This<br>processing item consolidates existing image<br>conversion filtering into one processing item and<br>adds extra functions.                           |
|                     | -  | Panorama                      | Combine multiple image to create one big image.  |
|                     | oci  | Unit Macro                    | Advanced arithmetic processing can be easily incorporated into workflow as Unit Macro processing items.  |
|                     | oc   | Unit Calculation<br>Macro     | This function is convenient when the user wants to calculate a value using an original calculation formula or change the set value or system data of a processing item.  |
|                     |  | Calculation                   | Used when using the judge results and measured values of Procltem which are registered in processing units.  |
|                     | 1  | Line Regression               | Used for calculating regression line from plural measurement coodinate.  |
|                     | 0  | Circle Regression             | Used for calculating regression circle from plural measurement coordinate.   |
| Support             | G.   | Precise Calibration           | Used for calibration corresponding to trapezoidal distortion and lens distortion.  |
| measurement         | Same of the same o | User Data                     | Used for setting of the data that can be used as common constants and variables in scene group data.   |
|                     | <b>@</b>   | Set Unit Data                 | Used to change the ProcItem data (setting parameters,etc.) that has been set up in a scene.  |
|                     | 00   | Get Unit Data                 | Used to get one data (measured results, setting parameters,etc.) of ProcItem that has been set up in a scene.  |
|                     |  | Set Unit Figure               | Used for re-setting the figure data (model, measurement area ) registered in an unit.  |
|                     | <u>a-</u>  | Get Unit Figure               | Used for get the figure data (model, measurement area ) registered in an unit.   |
|                     |  | Trend Monitor                 | Used for displaying the information about results on the monitor, facilitating to avoid NG and analyze causes.   |
|                     | 200  | Image Logging                 | Used for saving the measurement images to the memory and USB memory.   |
|                     | 2-   | Image Conversion<br>Logging   | Used for saving the measurement images in JPEG and BMP format.   |
|                     | 红  | Data Logging                  | Used for saving the measurement data to the memory and USB memory.   |
|                     | ۵  | Elapsed Time                  | Used for calculating the elapsed time since the measurement trigger input.   |
| Support measurement | $\underline{\underline{\mathbf{Z}}}$   | Wait                          | Processing is stopped only at the set time. The standby time is set by the unit of [ms].   |
|                     | 4  | Focus                         | Focus setting is supported.  |
|                     | <b>&gt;</b>  | Iris                          | Focus and aperture setting is supported.   |
|                     | 2000   | Parallelize                   | A part of the measurement flow is divided into two or more tasks and processed in parallel to shorten the measurement time. This processing item is placed at the top of processing to be performed in parallel.                                 |

| Group       | Icon         |                                 | Processing Item   |  |
|-------------|--------------|---------------------------------|---|--|
|             | 0,000        | Parallelize Task                | A part of the measurement flow is divided into two or more tasks and processed in parallel to shorten the measurement time. This processing item is placed immediately before processing to be performed in parallel between Parallelize and Parallelize End. |  |
|             |              | Statistics                      | Used when you need to calculate an average of multiple measurement results.   |  |
|             |              | Reference Calib<br>Data         | Calibration data and distortion compensation data held under other processing items can be referenced.  |  |
|             |              | Position Data<br>Calculation    | The specified position angle is calculated from the measured positions.   |  |
|             | 20           | Stage Data                      | Sets and stores data related to stages.   |  |
|             | ,Son         | Robot Data                      | Sets and stores data related to robots.   |  |
|             | Sept.        | Vision Master<br>Calibration    | This processing item automatically calculates the entire axis movement amount of the control equipment necessary for calibration.   |  |
|             | Con.         | PLC Master<br>Calibration       | Calibration data is created using a communication command from PLC.   |  |
| Support     | ţj           | Convert Position<br>Data        | The position angle after the specified axis movement is calculated.   |  |
| measurement | 4            | Movement Single<br>Position     | The axis movement that is required to match the measured position angle to the reference position angle is calculated.  |  |
|             | 30           | Movement Multi<br>Points        | The axis movements that are required to match the measured position angles to the corresponding reference position angles are calculated.   |  |
|             | +            | Detection Point                 | Obtains position/angle information by referring to the coordinate values measured with the Measurement Processing Unit.   |  |
|             | •==          | Manual Position<br>Setting      | Used to change the measurement coordinates X and Y of the measurement processing unit.  |  |
|             | 4            | Camera Calibration              | By setting the camera calibration, the measurement result can be converted and output as actual dimensions.   |  |
|             | 40           | Data Save                       | The set data can be saved in the controller main unit or as scene data. The data is held even after the FH/FZ power is turned off.  |  |
|             |              | Conveyor<br>Calibration         | Conveyor Calibration is used to calibrate camera, conveyor, and robots for conveyor tracking application.   |  |
|             |              | Scene                           | The specified scene is copied to the current scene.   |  |
|             | 0            | System Information              | Obtain system information (e.g., memory and disk space and I/O input signal status) of the Sensor Controller.   |  |
|             | &            | Conditional Branch              | Used where more than two kinds of products on the production line need to detected separately.  |  |
|             | A            | End                             | This Procltem must be set up as the last processing unit of a branch.   |  |
|             | 6            | DI Branch                       | Same as ProcItem "Branch". But you can change the targets of conditional branching via external inputs.   |  |
|             | *00          | Control Flow<br>Normal          | Set the measurement flow processing into the wait state in which the specific no-protocol command can be executed.  |  |
|             | *00          | Control Flow PLC<br>Link        | Set the measurement flow processing into the wait state in which the specific PLC Link command can be executed.   |  |
|             | 3-           | Control Flow<br>Parallel        | Set the measurement flow processing into the wait state in which the specific parallel command can be executed.   |  |
|             | 8-           | Control Flow<br>Fieldbus        | Set the measurement flow processing into the wait state in which the specific Fieldbus command can be executed.   |  |
| Durant      | 3            | Selective Branch                | Easily branch to multiple destinations.   |  |
| Branch      | h            | Conditional<br>Execution (If)   | The measurement flow is divided according to the comparison result obtained using the set expressions and conditions.   |  |
|             | h            | Conditional<br>Execution (Else) | Insert between the Conditional Execution (If) processing Item and End If processing Item. The measurement flow is divided according to the comparison result obtained using the set expressions and conditions.   |  |
|             | (C)          | Loop                            | The set processes are repeated until the loop count reaches the specified number, and then the next process starts.   |  |
|             | <b>(,7</b> ) | Loop Suspension                 | Insert between the Loop processing item and<br>End Loop processing item. Used to stop the loop<br>before the loop count reaches the specified<br>number.  |  |
|             | 4            | Select Execution<br>(Select)    | Used to set conditions. The measurement flow is divided according to the comparison result obtained using the conditions given by expressions.  |  |
|             | d            | Select Execution<br>(Case)      | Used to make a judgment. The measurement flow is divided according to the comparison result obtained using the conditions given by expressions.   |  |

| Group          | Icon     | Processing Item              |  |  |
|----------------|----------|------------------------------|--|--|
|                |          | Result Output (I/O)          | Output data to the external devices such as a programmable controller or a PC via PLC Link, Parallel interface, Fieldbus interface (EtherCAT, EtherNet/IP (other than message communication), PROFINET).   |  |
|                | B        | Result Output<br>(Message)   | Output data to the external devices such as a programmable controller or a PC with non-procedure mode via the serial interface or EtherNet/IP (message communication). This processing item allows you to save the logging data as a ".csv" file into the Sensor Controller as well. |  |
| Output result  | Ш        | Data Output                  | Used when you need to output data to the external devices such as PLC or PC via serial ports.  |  |
|                | -        | Parallel Data<br>Output      | Used when you need to output data to the external devices such as PLC or PC via parallel ports.  |  |
|                | <b>5</b> | Parallel Judgement<br>Output | Used when you need to output judgement results to the external devices such as PLC or PC via parallel ports.   |  |
|                |          | Fieldbus Data<br>Output      | Outputs data to an external device, such as a<br>Programmable Controller, through a fieldbus<br>interface.   |  |
|                |          | Result Display               | Used for displaying the texts or the figures in the camera image.  |  |
| Display result | -        | Display Image File           | Display selected image file.   |  |
|                |          | Display Last NG<br>Image     | Display the last NG images.  |  |
|                | 7        | Conveyor<br>Panorama Display | Display images of the tracking area as a panoramic image.  |  |
|                | ò        | Display Image Hold           | Processing item to retain images, including measurement results.   |  |

<sup>\*1 2</sup>D Codes that can be read : Data Matrix (ECC200)


\*2 2D Codes that can be read : Data Matrix (ECC200), QR Code

\*3 Bar Codes that can be read : JAN/EAN/UPC (including add-on codes),
Code 39, Codabar (NW-7), ITF (Interleaved 2 of 5), Code 93, Code 128,
GS1-128, GS1 DataBar (RSS-14 / RSS Limited / RSS Expanded),
Pharmacode


(Unit: mm)


### Camera


### FJ-SG2/SCG2/S5MG2/SC5MG2















### FJ-S2MG2/SC2MG2













### Camera cable (LAN)

FJ-VSG □□M

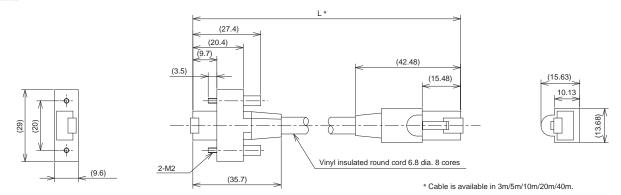

### Camera cable (Power, I/O)


FJ-VSP2 □□M

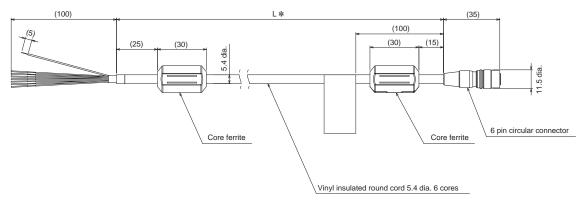


\* Cable is available in 3m/5m/10m.

### **Optical Chart**


### 400,000-pixel digital camera FJ-SCG2/SG2

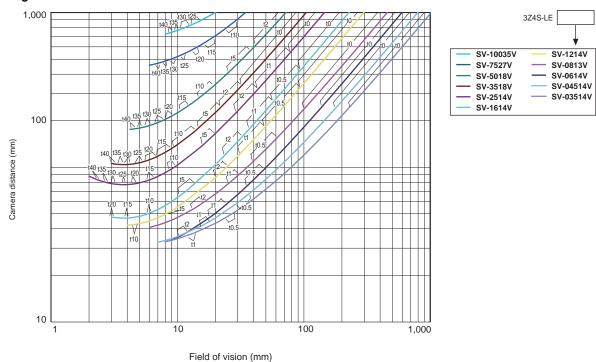

### 2 million-pixel digital camera FJ-SC2MG2/S2MG2

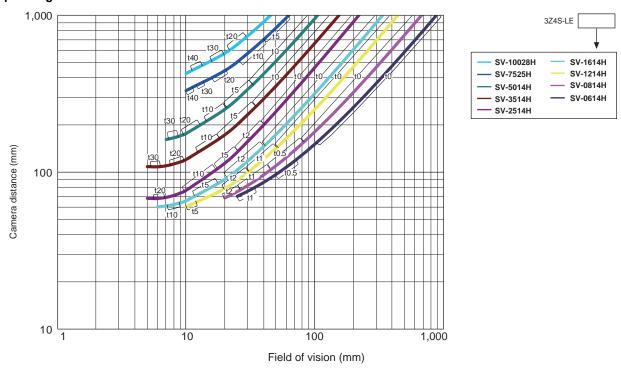


#### 5 million-pixel digital camera FJ-SC5MG2/S5MG2

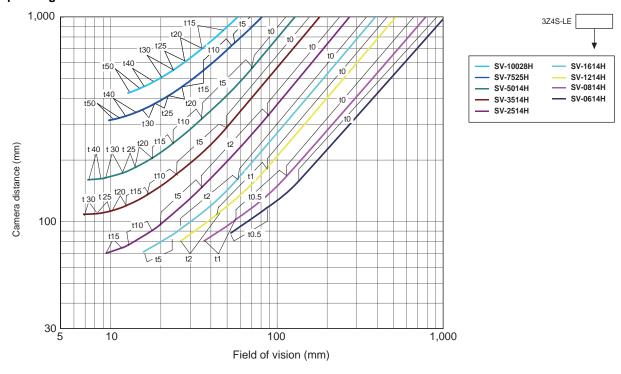

### ■ Meaning of Optical Chart

The X axis of the optical chart shows the field of vision (mm)(Note1), and the Y axis of the optical chart shows the camera installation distance (mm)(Note2).

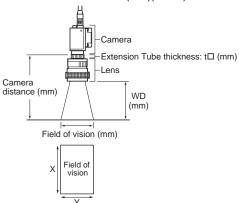

Note: 1. The lengths of the fields of vision given in the optical charts are the lengths of the Y axis.

2. The vertical axis represents WD for small cameras.

### **Related Manuals/Catalog**

| Man.No. | Series    | Manual   |
|---------|-----------|--|
| Z428    | FJ Series | FJ Series (Camera & Software Vision Package) PC Vision System Camera Setup Guide |

<sup>•</sup> Microsoft® Visual Studio® and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

<sup>•</sup> Intel and the Intel logo are trademarks of Intel Corporation in the U.S. and/or other countries.

<sup>•</sup> Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

## **Terms and Conditions Agreement**

### Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

#### Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

#### Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

### Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### **Programmable Products.**

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

#### Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

### Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

### **Errors and Omissions.**

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

Note: Do not use this document to operate the Unit.

### **OMRON Corporation** Industrial Automation Company

Kyoto, JAPAN Contact : www.ia.omron.com

### Regional Headquarters

### OMRON EUROPE B.V.

Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands Tel: (31) 2356-81-300 Fax: (31) 2356-81-388

#### OMRON ASIA PACIFIC PTE. LTD.

438B Alexandra Road, #08-01/02 Alexandra Technopark, Singapore 119968 Tel: (65) 6835-3011 Fax: (65) 6835-3011

### OMRON ELECTRONICS LLC

2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900 Fax: (1) 847-843-7787

#### OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-6023-0333 Fax: (86) 21-5037-2388

### Authorized Distributor:

©OMRON Corporation 2011-2024 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

CSM\_4\_4

Cat. No. Q188-E1-05 0524 (0811)